

HOT TUB INSTALLATION GUIDE

HOT TUB INSTALLATION GUIDE

- Ensure that the hot tub and heat exchanger is placed on a solid level surface. This will enable the heat exchanger to align directly with the hot tub's inlet and outlet.
- Connect the heat exchanger to the tub using the quick connector fittings and place the pan underneath the heat coil.
- Place the cover over the heat exchanger coil.
- Fill the tub with water to the desired level, always keeping the level higher than the warm water inlet level.
- Open the lid of the heat exchange and light a small fire inside the exchanger, once burning. larger wood / logs can be added to maintain a steady fire.
- Heating time can be achieved within 2-3 hours (17°- 35°) with 3 bags of firewood.
- After wood has been added to the fire, close the lid of the heat exchanger by using the lid hook which comes with the exchanger.

PLEASE ENSURE THAT:

- Well-ventilated outside or outdoor use only.
- Take caution with children around the hot tub.
- Clean the inside with a soft cloth, not with hard brooms or objects that will damage the powder coated surface.
- Never leave the fire unattended.

